



■ Encoding settings

By setting the encoding parameters, it achieves the high-quality playback and remote monitoring capabilities. Click[] -> [Encode];

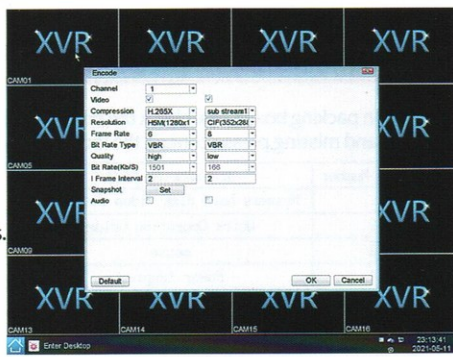


■ Video playback

Video playback includes video query, playback and other operations. Click[] > [Playback];

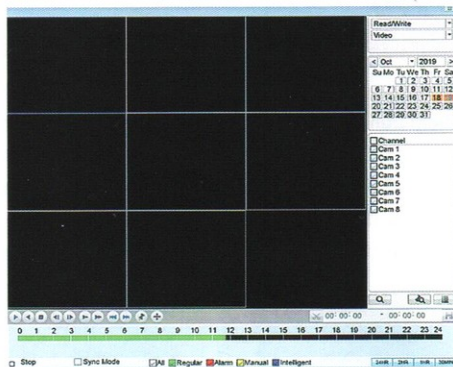


■ Network settings

Click[] > [Network];

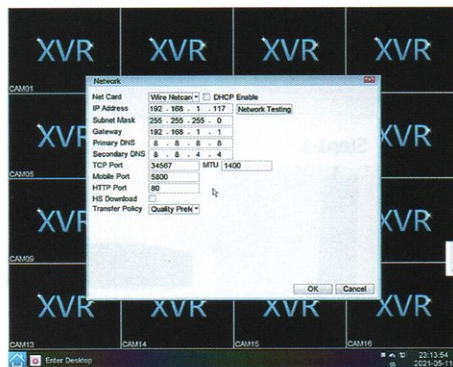


■ Motion detection settings

Motion detection is mainly divided into two parts: Alarm function settings of motion detection (enable switch, sensitivity, detection area, the time period of arm and disarm and the time interval), that is, how to set to make an alarm. Linkage settings of motion detection (screen prompts, beep, alarm output and round tour) and others that need to be combined with other function settings (such as linkage recording and sending Email), that is, how to dispose after the alarm. You can find the interface of function settings by the following means: Click[] > [Alarm] > [Motion Detect];

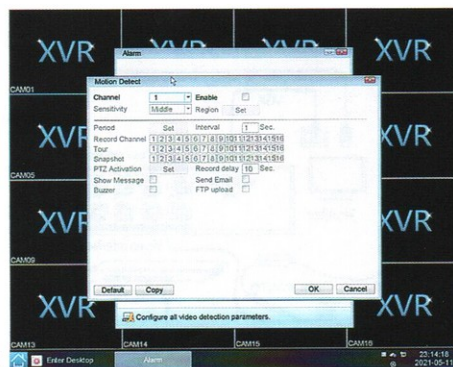


■ Coaxial audio settings

Coaxial audio means that the back-end equipment is connected to a coaxial camera, and audio can be input directly through the front-end camera.

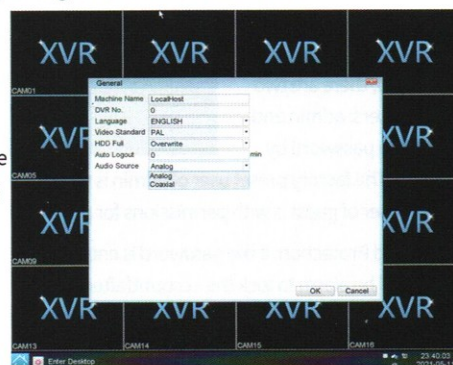

(1) Audio source selection
Click[] > [General], Select the audio source as coaxial audio;


(2) Encoding audio settings
HDMI connection device, coaxial audio needs to turn on the audio switch in the encoding setting (VGA connection, no need to open). Click[] -> [Encode], Check Audio;

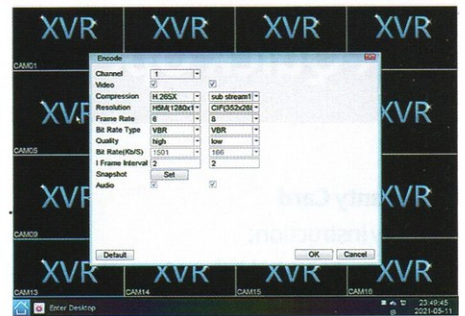

05 Part 2 Remote control

■ Web remote access


After the network connected, use a browser the PC comes with, and log in the DVR for remote monitoring. For details, please refer to the "WEB2.0 client instructions".

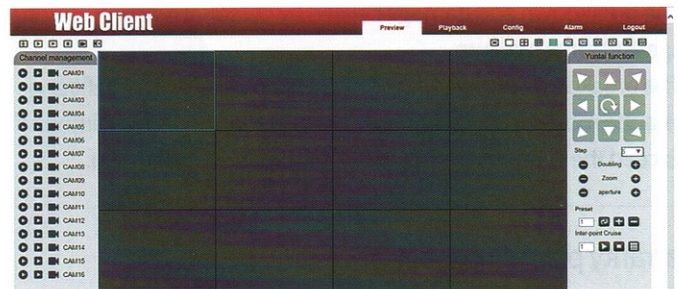

WEB界面

■ VMS remote access


VMS is a professional software for remote monitoring of multi-devices, with advantages of safety, convenience, stability and unified management of multiple devices, etc. It's easy to install and do not need to download plug-ins. we recommend that customers use it. For details, please refer to the manual of VMS Ways to obtain: Log in to <http://www.hztaoshi.com> [Service Support]>[Download]>[Taoshi Supporting Client Download]>[VMS] to download the latest version of the video management system [VMS].

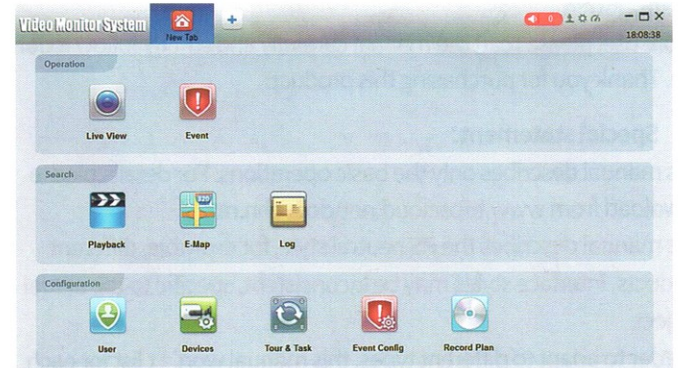

■ Mobile phone monitoring

Note: Before using APP remote connection, make sure NVR connected to the Internet.

Step 1: The function of mobile phone monitoring is enabled by default; Click[] > [Cloud Service], you can view the server address, port & UID and download the APP for IOS or Android system by scanning the QR code.
Step 2: Register an APP account, log in as a user and add a preview of the device ID.

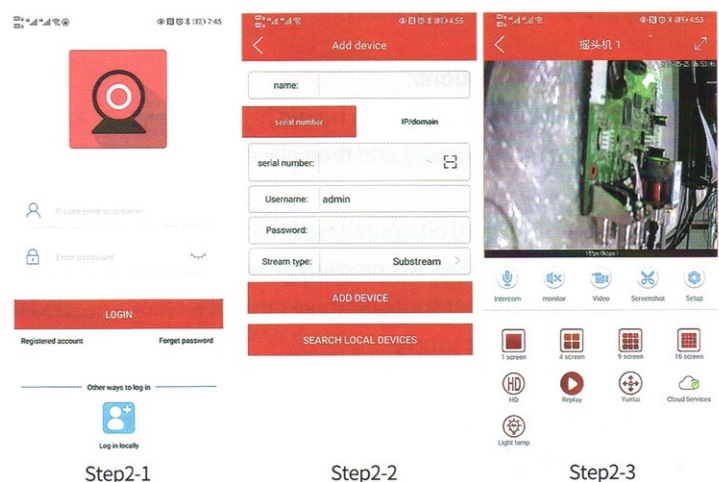

Step2-1

Step2-2

Step2-3

■ Warranty Card

Warranty instruction:

- in warranty period, if there is any breakdown which caused by the product own defect, please connect with dealers or after-sale server of our company.
- Be sure not to use surface mail or cash on delivery to send back the product.
- Free maintain will not be given under the following circumstance:
 - Without valid warranty certificate or purchasing invoice or receipt.
 - The breakdown and damage caused by personal reasons, wrong usage and force majeure.
 - The breakdown and damage caused by maintenance, refit and dismantle movement of a non-our-company authorized maintainer.
 - Exceed the warranty period of our company's prescription.

Warranty period: one year

Your Name : _____ Your TEL : _____
 Address : _____
 Dealer : _____ Contact person : _____
 TEL : _____ Purchase time : _____

Please take care of the warranty card and get more efficient and better service, thank you for purchasing our product!

■ User notice

Before use, please read the manual carefully and strictly follow it during use. Thank you for purchasing this product.

⚠ Special statement:

This manual describes only the basic operations. For details, please download from www.topscloud.net/doc_chn.rar.

This manual describes the RS neutral style, for example, different products, interface styles may be inconsistent, specific to the actual subject

In order to adapt to different types, this manual won't list for each specific operation. Our company reserves the right of final interpretation of it.

Product specification content will be updated in real time, without prior notice.

Instructions may include technical inaccuracies or inconsistent with product features or printed the wrong place, please refer to the Company's final interpretation shall prevail.

⚠ Installation precautions:

- The device shall be kept away from humid, high temperature and strong magnetic environment, and then place it in a well ventilated place;
- Please use the SATA hard disk purchased through regular channels;
- Please ensure that the device is properly grounded, the power supply can not exceed the power supply voltage range, it is recommended to use the standard power supply;
- Do not directly cut off the power when the device is running. Shut down the device from software and then cut off the power to prevent the hard disk from being damaged.

After open packing box, please check the product body and accessories, if exist damage and missing, please contact the local provider in time.

Serial Number	Accessories Name	Amount	Unit
1	Network hard disk video recorder	1	a
2	Quick Operation Guide	1	a
3	mouse	1	a
4	Power Adapter	1	a
5	Hard Disk Fastening Screw Pack	1	a


02 Hard disk installation

Note: Power down the device before installing it.


Step 1: unscrew the screws at the bottom or back of the chassis and remove the upper cover;

Step 2/3: first tighten the hard disk screws, and then connect the data cable and power cable to the hard disk interface.


Step 4/5: close the cover of the chassis and fix it with screws.

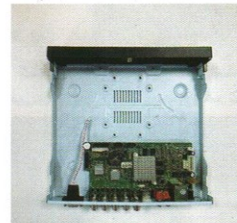


Step1-1

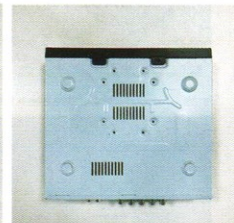

Step2-1

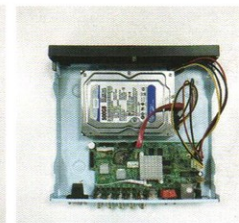

Step3-1

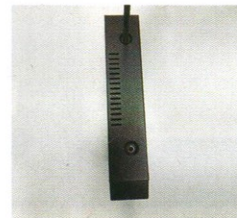

Step4-1




Step5-1



Step5-2

03 Connection diagram

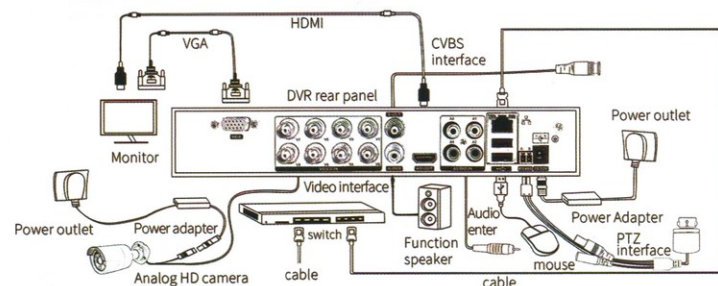

04 Basic operations

■ Login

After the device boots up, the user must login and the system provides the corresponding functions according to the permissions of the logged in user.

When the device is delivered, there are two preset users: admin and guest, no password by default. The factory preset user of admin is with superuser privileges; the factory preset user of guest is with permissions for preview and video playback.

Password Protection: If the password is entered wrong for 5 times consecutively, there will be alarm to lock the account (after the system reboot or half an hour, the locked account will be unlocked automatically). For security reasons, please change the user name and password in the "User Management" in time.

